

# Neptune4



## LED修正メモ

1. Add these to your printers home/mks folder. Open Putty and run `bash install.sh` (Its normal if it returns an oooopsie, just move on) Remove lines in `printer.cfg` about flashlight and replace with these:  
[gcode\_shell\_command hotend] command: `sh /home/mks/toggleled.sh` timeout: 30. verbose: True

[gcode\_shell\_command overhead] command: `sh /home/mks/toggleovr.sh` timeout: 30. verbose: True

 
[gcode\_macro Hotend LED] description: Turn on Hotend LEDs gcode:

```
RUN_SHELL_COMMAND CMD=hotend
```

[gcode\_macro Overhead LED] description: Turn on Hotend LEDs gcode:

```
RUN_SHELL_COMMAND CMD=overhead
```

4: Profit



From:

<http://deepsky.jp/wiki/> - うごくといいな

Permanent link:

<http://deepsky.jp/wiki/doku.php?id=memo:3dp:neptune4>

Last update: **2025/10/19 19:19**

